


Notice de démontage/remontage pour nettoyage Impacteur de Cupule (Voie antérieure)

Références associées	Désignation	Nombre de composants
B227242	Impacteur de cupule courbe (Voie antérieure)	2

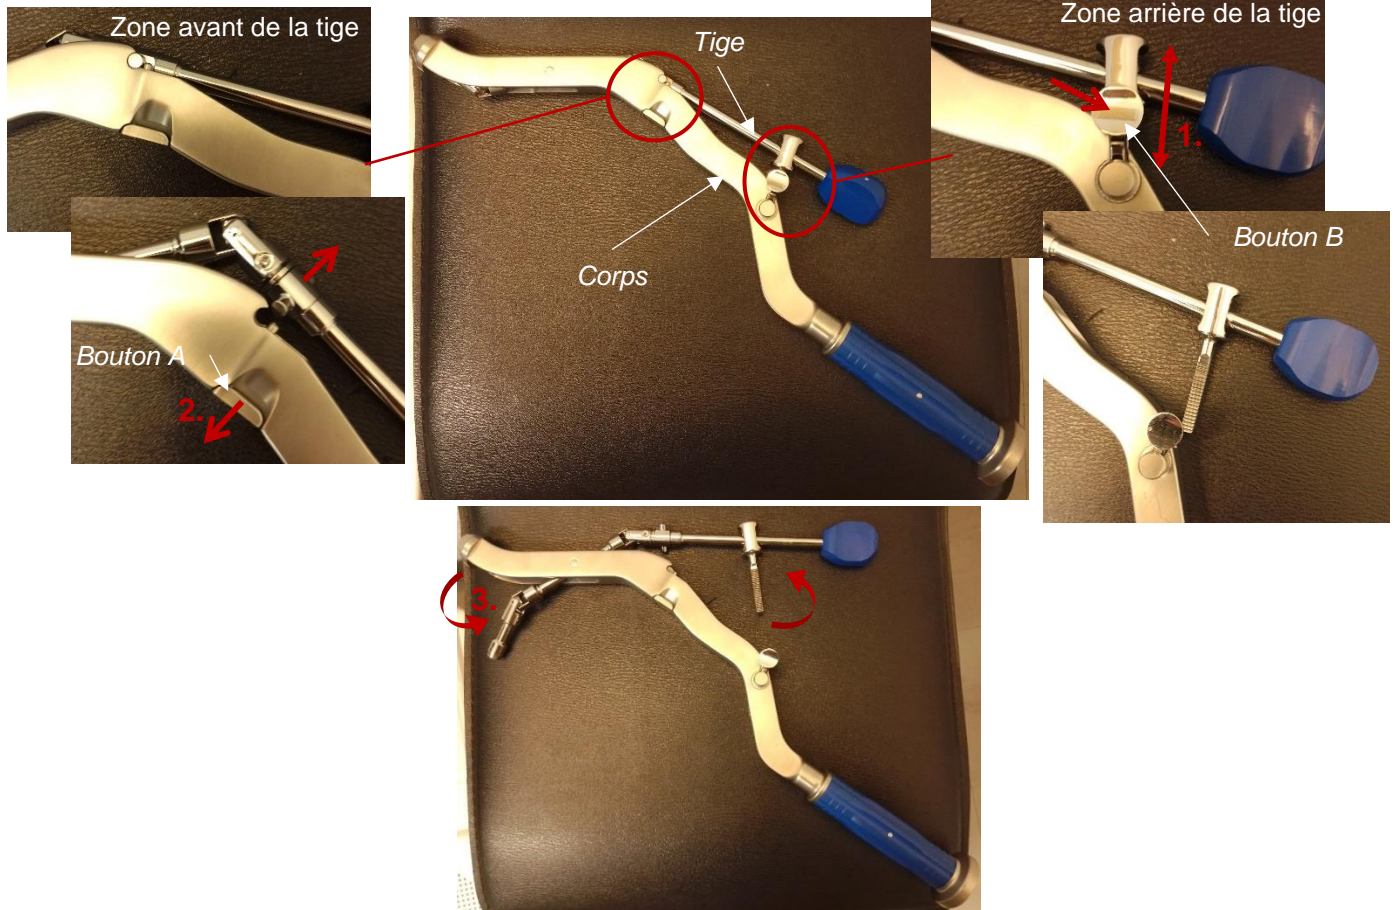

Etapes de démontage/remontage pour nettoyage


Pour le nettoyage de l'impacteur, le démontage est **obligatoire** :

1. Au niveau de la zone arrière de la tige, appuyer sur le bouton A et détacher l'arrière de la tige du corps de l'impacteur ;
2. Au niveau de la zone avant de la tige, appuyer sur le bouton B et détacher l'avant de la tige du corps de l'impacteur ;
3. Faire pivoter la tige dans le corps ;
4. Nettoyer l'ensemble ;
5. Remonter le tout sans forcer.

Instruction for assembly and disassembly for cleaning

Cup impactor (Anterior approach)

Associated reference	Designation	Number of components
B227242	Cup impactor (anterior approach)	2

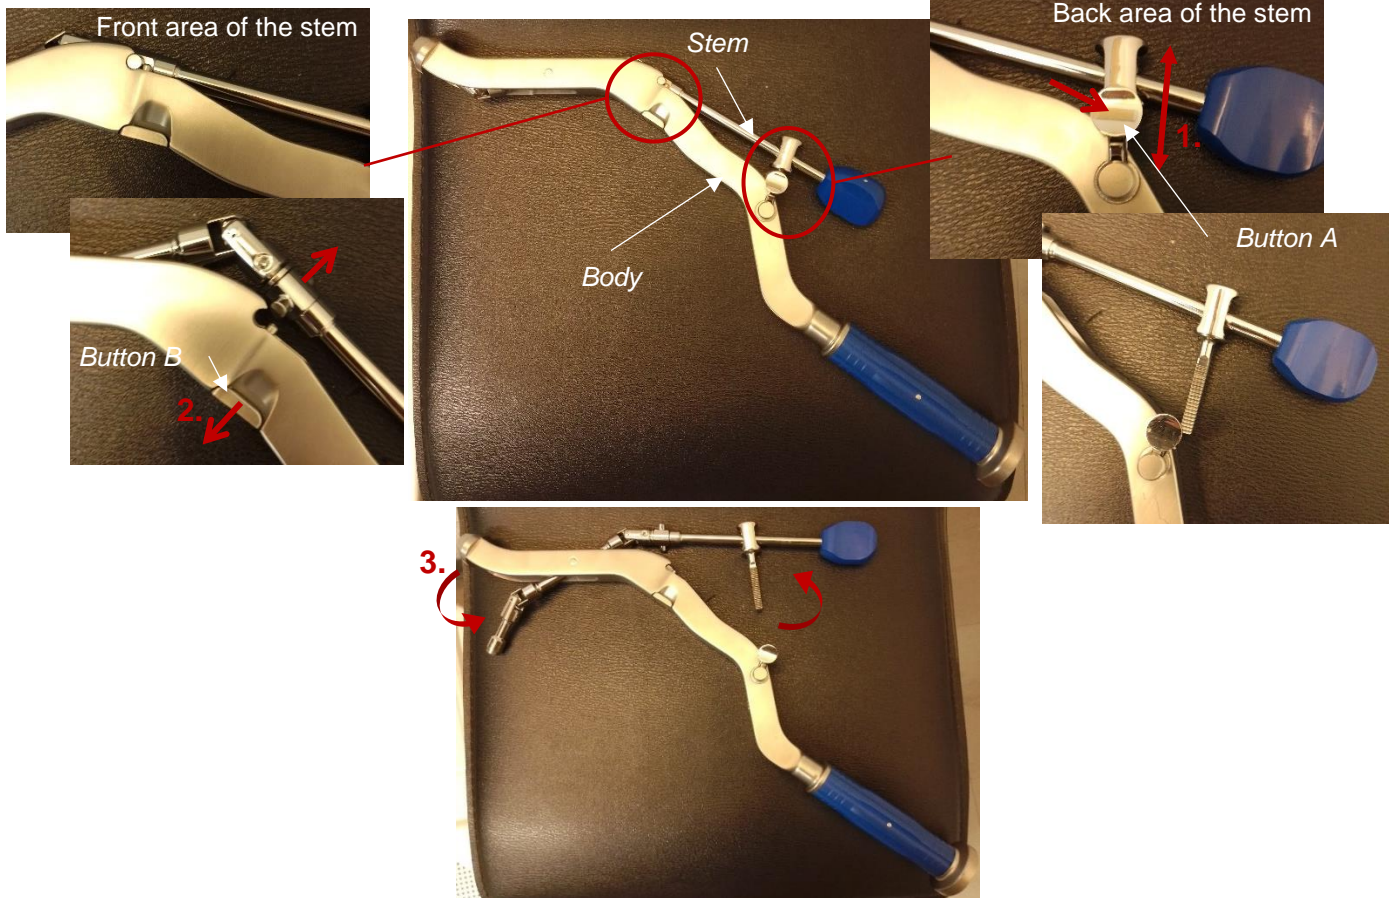

Steps for assembly/disassembly for cleaning

For the cleaning of the adjustable square awl, the disassembly is **obligatory**:

1. On the back area of the stem, press the button A and unfasten the back of the stem from the body;
2. On the front area of the stem, press the button B and unfasten the front of the stem from the body;
3. Rotate the stem in the body;
4. Clean the whole;
5. Assemble the set without force.